

SETUP AN ALEXA

Follow the instructions below to reset an Amazon Echo Show (screen).

1 Add Alexa Wifi



Identify the WiFi that this Alexa will be connected to.

2 Sign in with Alexa



Boot up the Show, when prompted, connect to your WiFi and sign in with setup@speak2software.com and (password provided separately)

3 Set up Alexa



Skip all prompts and steps presented on the Echo Show, such as entering an address, turning on Sidewalk and other options. Do not add the location. Do not add a mobile phone number.

4 Provide Speak2 3-digit code



Inform support@speak2family.com the 3 digit code and which room the Alexa should assigned to.

NOTE: you must keep the device plugged in until Speak2 confirms the device has moved to its designated room